


Figure 2

Figur 2

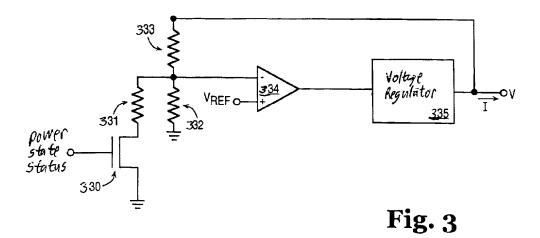

Set VR output voltage level
within tolerance lange and
provide to multiple components

No state status

Charge?

502

Yes

Adjust VR output

voltage accordingly
503

Figure 5